



TABLE OF CONTENTS

SECTION 0 – SAFETY

SECTION 1 - SITE PLANNING & INSTALLATION

SECTION 2 - STARTUP PROCEDURES FOR HYDRO

SECTION 3 - HYDRO ADJUSTMENT PROCEDURES

SECTION 4 - GROUP STARTUP PROCEDURES

SECTION 5 - CONTROLLER COMMUNICATION INTRODUCTION

SECTION 6 - CAR COMMANDS

SECTION 7 - CAR ADJUSTMENT PARAMETERS

SECTION 8 - CONTROL STATUS WORD BIT COMMANDS (CAR)

SECTION 9 - CONTROLLER ERROR CODE DEFINITION

SECTION 10 – GROUP COMMANDS

SECTION 11 - GROUP ADJUSTMENT PARAMETERS

SECTION 12 - CONTROL STATUS WORD BIT COMMANDS (GROUP)

SECTION 13 - TECHNICAL INFORMATION

SECTION 14 - GLOSSARY

SECTION 15 - SOFT STARTER