



Table of Contents

SECTION 1 - SITE PLANNING & INSTALLATION

Machine Room Layout..... 1-1
 Machine Room Duct, Conduit and Wiring 1-2
 Hoistway Switches, Tape and Tapeless Installation, Conduit and Wiring 1-6
 Hall Position Indicator, Push Button and Hall Lantern Wiring 1-9
 Car Top Box and Encoder Installation..... 1-12
 Magnet Placement..... 1-15
 COP and CC1 Board Installation..... 1-15
 Door Board Installation 1-15
 Load Weigher 1-17

SECTION 2 - FUTURA STARTUP PROCEDURES WITH HPV 900/600

Machine Room Preparations 2-1
 Field Wiring Check..... 2-1
 Brake and Motor Check 2-3
 Transformer(s) Configuration..... 2-3
 SPU Power-up, Initialization and Wizard Operation..... 2-4
 SPU Power-up and Wizard Connection..... 2-4
 System Initialization (For No-Go Tests)..... 2-5
 Establishing Correct Direction and Speed 2-5
 Running the Car on Inspection 2-7
 Running From A Temporary Run Box 2-8

SECTION 3 - FUTURA STARTUP PROCEDURES WITH DSD 412

Machine Room Preparations 3-1
 Field Wiring Check..... 3-1
 Brake and Motor Check 3-3
 Transformer(s) Configuration..... 3-3
 SPU Power-up, Initialization and Wizard Operation..... 3-4
 SPU Power-up and Wizard Connection..... 3-4
 System Initialization (For No-Go Tests)..... 3-5
 Drive Startup Procedure 3-6
 Magnatek DSD 412 - Parameter Setup and Check..... 3-6
 Self Test..... 3-6
 Self Tune..... 3-6
 Moving the Car on Inspection for Serial Drives 3-9
 Inspection Operation 3-10
 Running From A Temporary Run Box..... 3-11

SECTION 4 - FUTURA STARTUP PROCEDURES WITH SWIFT DRIVE

Machine Room Preparations 4-1
 Field Wiring Check..... 4-1
 Brake and Motor Check 4-3
 Transformer(s) Configuration..... 4-3
 Temporary Jumper Installation 4-3
 AC Voltage and Switch Test 4-4
 SPU Power-up, Initialization and Wizard Operation..... 4-4
 SPU Power-up and Wizard Connection..... 4-4
 System Initialization (For No-Go Tests)..... 4-5
 Drive Startup Procedure 4-6
 Establishing Correct Encoder, Motor and Speed Direction 4-9
 Running From A Temporary Run Box 4-10



SECTION 5 - FUTURA STARTUP PROCEDURES WITH A MG

SECTION 6 - FUTURA ADJUSTMENT PROCEDURES WITH HPV 900/600

SPU Communication Verification 6-1
 Hoistway Completion and Verification 6-1
 Counter-weighting 6-1
 Magnet and Switch Placement 6-2
 DPP Setup 6-2
 Auto-Setup 6-3
 Running High Speed 6-4
 HPV 900 Final Adjustments 6-4
 Adaptive Tune 6-4
 "S" Curve and Floor Accuracy Adjustments 6-5
 Brake Adjustment 6-5
 Observing the "S" Curve on the Drive (HPV 900) 6-8
 Final Approach 6-9
 Miscellaneous Safety Parameter Adjustments 6-9
 Terminal and Emergency Slowdown Limit Adjustments 6-10
 Load Weigher Setup 6-10
 Pre-torque Setup 6-12
 Miscellaneous Adjustments 6-12
 Setting the Hoistway Access 6-12
 Setting Earthquake Collision 6-12
 Various Door Parameters an Control Status Word Settings 6-13
 Buffer Test 6-15
 OverSpeed Test 6-15
 ETS Test 6-16

SECTION 7 - FUTURA ADJUSTMENT PROCEDURES WITH DSD 412

SPU Communication Verification 7-1
 Hoistway Completion and Verification 7-1
 Counter-weighting 7-1
 Magnet and Switch Placement 7-2
 DPP Setup 7-2
 Auto-Setup 7-3
 Running High Speed 7-4
 DSD 412 Final Adjustments 7-4
 "S" Curve and Floor Accuracy Adjustment 7-5
 Brake Adjustment 7-5
 Observing the "S" Curve on the Drive (DSD412) 7-8
 Final Approach 7-9
 Miscellaneous Safety Parameter Adjustments 7-9
 Terminal and Emergency Slowdown Limit Adjustments 7-9
 Load Weigher Setup 7-10
 Pre-torque Setup 7-12
 Miscellaneous Adjustments 7-12
 Setting the Hoistway Access 7-12
 Setting Earthquake Collision 7-12
 Various Door Parameters an Control Status Word Settings 7-13
 Buffer Test 7-15
 Over Speed Test 7-15
 ETS Test 7-16



SECTION 8 - FUTURA ADJUSTMENT PROCEDURES WITH SWIFT DRIVE

Hoistway Completion and Verification	8-1
Inspection Operation	8-1
Magnet Placement	8-2
DPP Setup	8-3
Slowdown and ETS Switch Check	8-4
Machine Room Verification	8-5
Counter-weighting	8-6
Brake Setup	8-6
Board Communication Check	8-8
Hoistway Switch Check.....	8-8
Drive Parameter Adjustments	8-9
Auto Setup	8-12
High Speed Operation	8-12
Miscellaneous Adjustments	8-12
One Floor Run Test	8-12
Multi Floor Runs.....	8-13
Ride Quality Adjustments.....	8-13
Floor Level Adjustments	8-13
Terminal Backup Setup.....	8-13
Terminal Backup Settings.....	8-15

SECTION 9 - FUTURA ADJUSTMENT PROCEDURES WITH A MG

SECTION 10 - FUTURA GROUP SETUP

HPU Hall Call Activation	10-1
Setting Additional Group Parameters	10-1
Group Dispatching	10-1
Parking One or More Cars at the Lobby	10-2
Zoning Setup.....	10-2
Up Peak and Down Peak.....	10-3
Setting Elevator ETA Parameters in the Group.....	10-3

SECTION 11 – CONTROLLER COMMUNICATION INTRODUCTION

Terminal Mode Operation	11-1
Wizard Mode Operation	11-2
Controller Commands & Parameters	11-3
Line Editing And Control Characters	11-3
Power-Up Or Reset Message Sequence	11-3
Log-On	11-5
Changing Passwords	11-5
Using the Swift-Futura Remote Video Unit.....	11-7
Introduction	11-7
Initialization and Communication Setup	11-8
The Group Screen.....	11-9
Setting a Hall Call from the Group Screen	11-10
Setting a Car Call from the Group Screen	11-10
Canceling Car Calls from the Group Screen	11-10
Changing the Appearance of the Group Screen	11-10
The Car Diagnostic Screen	11-11
Setting a Car Call from the Diagnostic Screen	11-11
Canceling Car Calls from the Diagnostic Screen	11-11
Triggering for Errors	11-11
Viewing Error Information	11-12
Resetting Errors	11-12



SECTION 12 - CAR COMMANDS

Car Diagnostic Commands 12-1

SECTION 13 - CAR ADJUSTMENT PARAMETERS

SECTION 14 - CONTROL STATUS WORD BIT COMMANDS (CAR)

CSW Car (Control Status Word 0) 14-1
CS1 Car (Control Status Word 1)..... 14-2
CS2 Car (Control Status Word 2)..... 14-3
CS3 Car (Control Status Word 3)..... 14-4
CS4 Car (Control Status Word 4)..... 14-5
CS5 Car (Control Status Word 5)..... 14-5
CS6 Car (Control Status Word 6)..... 14-6
CS7 Car (Control Status Word 7)..... 14-6
CS8 Car (Control Status Word 8)..... 14-7
CS9 Car (Control Status Word 9)..... 14-8
CS10 Car (Control Status Word 10)..... 14-8
CS11 Car (Control Status Word 11)..... 14-9

SECTION 15 - CONTROLLER ERROR CODE DEFINITION

SECTION 16 – GROUP COMMANDS

Group Diagnostic Commands..... 16-1

SECTION 17 - GROUP ADJUSTMENT PARAMETERS

Group Related Car ETA Parameters..... 17-5

SECTION 18 - CONTROL STATUS WORD BIT COMMANDS (GROUP)

CSW Group (Control Status Word 0) 18-1
CS1 Group (Control Status Word 1)..... 18-2
CS2 Group (Control Status Word 2)..... 18-2
CS3 Group (Control Status Word 3)..... 18-3
CS4 Group (Control Status Word 4)..... 18-3
CS5 Group (Control Status Word 5)..... 18-4
CS6 Group (Control Status Word 6)..... 18-4
CS7 Group (Control Status Word 7)..... 18-4
CS8 Group (Control Status Word 8)..... 18-5
CS9 Group (Control Status Word 9)..... 18-5



SECTION 19 - TECHNICAL INFORMATION

Introduction..... 19-1
 Controller Front Panel Device Identification 19-2
 Controller Rear Panel Device Identification..... 19-3
 DC SCR (DSD-412)..... 19-3
 MOTOR GENERATOR (MG) 19-4
 AC VVVF..... 19-5
 Controller Devices 19-5
 Introduction 19-5
 System Processing Unit (SPU) 19-7
 Introduction 19-7
 Jumper Configuration..... 19-7
 Component Identification Table 19-8
 SPU-Link Control Panel..... 19-8
 LED Indicators 19-9
 Communication Ports..... 19-10
 Serial Module Interface (SMI & SMIC) 19-11
 Serial Module Interface I/O Base Board (SMI) 19-11
 Serial Module Interface Controller Board (SMIC)..... 19-12
 Brake and Motor Field Controller (BKMF Power & Control)..... 19-13
 Brake Power Board 19-13
 Brake Controller Under 3 Amps(DBC)..... 19-14
 Car Controller Devices 19-15
 Car Position Transducer (CPT) 19-15
 Leveling..... 19-15
 Load weighing..... 19-15
 SPU-Link Direct Connections (w/o EPU-Link)..... 19-15
 SPU-Link Connections with CDP..... 19-15
 Car Distribution Panel (EPU-Link)..... 19-16
 Elevator Processing Unit (EPU) 19-17
 Door Board Setup..... 19-18
 Door Adjustment Potentionmeters..... 19-18
 Door Force Potentionmeters..... 19-19
 Control Status Word/Bit Description..... 19-20
 Adjustment Parameter Descriptions..... 19-26

SECTION 20 - GLOSSARY

SECTION 21 – RMA (Return Merchandise Authorization) Forms