



INSTALLATION

- 1 Follow the instructions on "CTG Wiring Setup" for installing servers in the motor room(s) and "IP Address Configuration" to change the IP addresses of the motor room servers.
- 2 Connect the motor rooms to an existing network, or run new Cat5e cable to the client location. Runs of Cat5e cannot exceed 300ft./100m. If the run is longer, use a network repeater/switch between runs.
- 3 Connect the client PCs to the existing network or to the new Cat5e cables coming from the motor rooms directly, or using a network repeater/switch if the run is longer than 300ft./100m.



ATTENTION:

Cat5e (ethernet) network cable has a maximum run of 300 feet / 100 meters. You must use a network repeater or switch to extend the range of the network.



COMPUTERIZED ELEVATOR CONTROL CORP.
Moving People. Moving Business.