


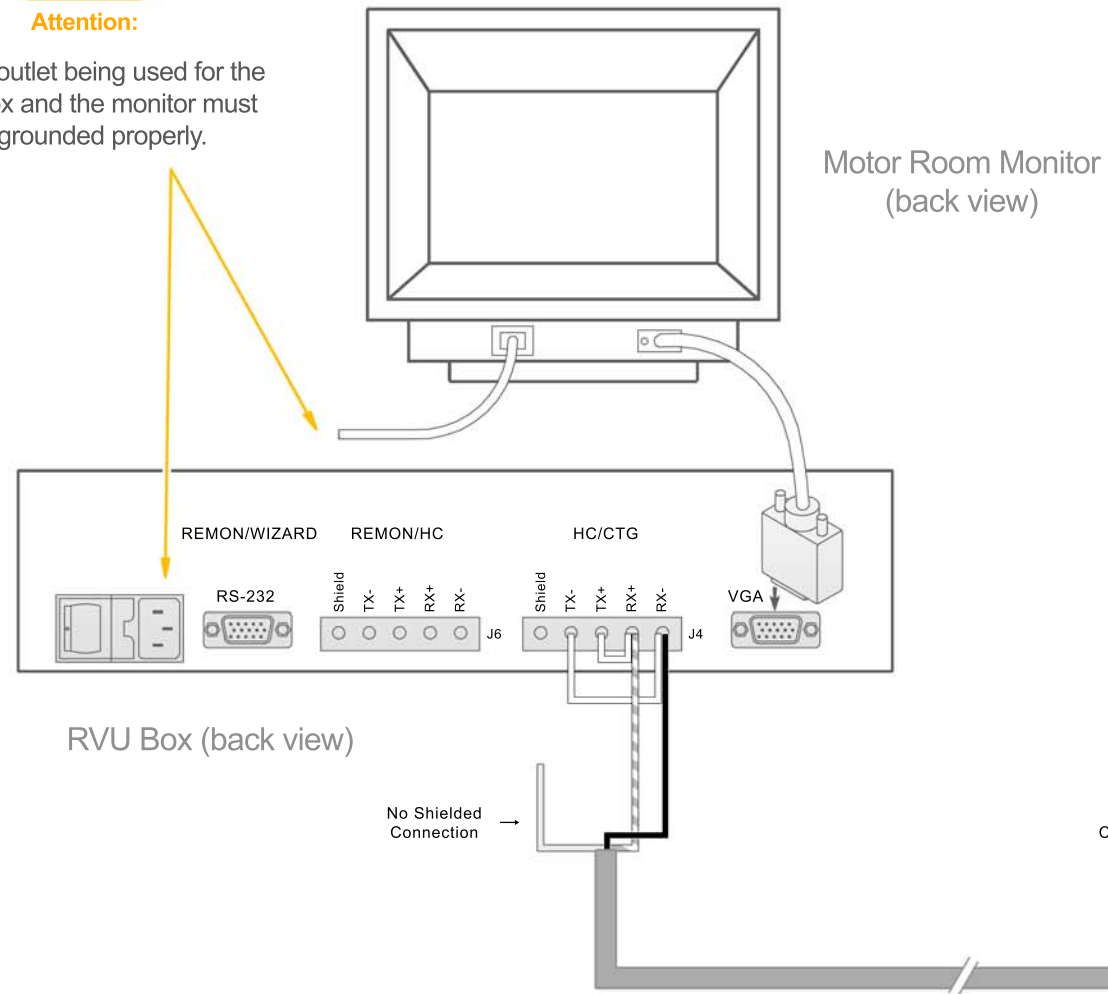


Attention:

The AC outlet being used for the RVU box and the monitor must be grounded properly.



If no RVU box, disregard this drawing.

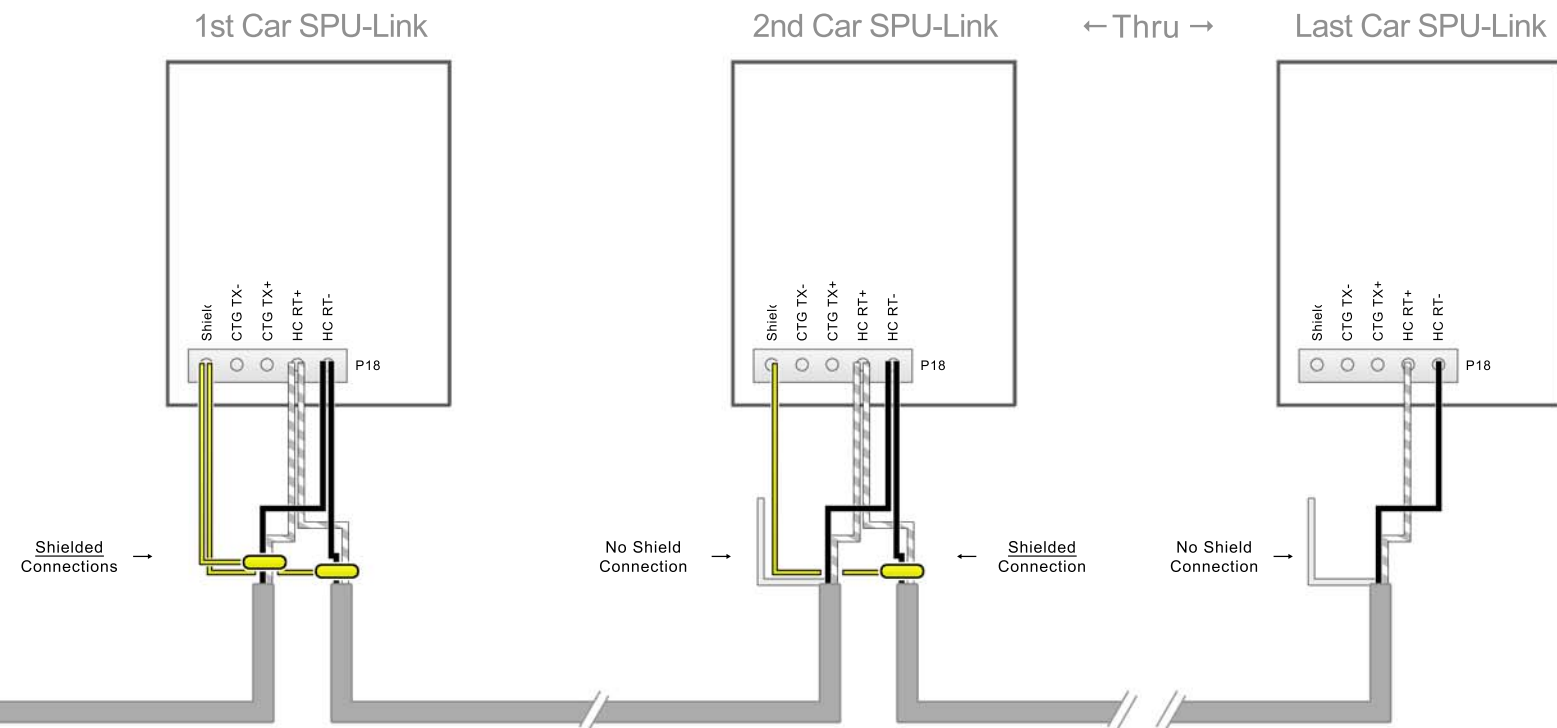

ATTENTION:

To switch to the CTG/HC parameters:

- 1) Press both the scroll left and right buttons simultaneously.
- 2) Highlight the 'comm address' parameter.
- 3) Press the enter button to switch the address to 211.
- 4) Press the rotate screen button and the RVU will reset.

Connection Table

RVU BOX (J4)		1 st Car (P18)	2 nd Car (P18)	Last Car (P18)
HC/CTG	RX-	HC RT-	HC RT-	HC RT-
HC/CTG	RX+	HC RT+	HC RT+	HC RT+



Shield is connected on cable leaving controller only. Shield on cable entering controller is cut and left unconnected. Use copper conductors only.



COMPUTERIZED ELEVATOR CONTROL CORP.
Moving People. Moving Business.